

XL1 Display

Innovation
For Results®

| | | | |
|----------------------------------|----------------------------------|----------------------------------|------------------------------------|
| <input type="checkbox"/> 24"x60" | <input type="checkbox"/> 30"x60" | <input type="checkbox"/> 36"x60" | <input type="checkbox"/> ___"x___" |
| <input type="checkbox"/> 24"x72" | <input type="checkbox"/> 30"x72" | <input type="checkbox"/> 36"x72" | <input type="checkbox"/> 48"x84" |
| <input type="checkbox"/> 24"x84" | <input type="checkbox"/> 30"x84" | <input type="checkbox"/> 36"x84" | <input type="checkbox"/> 48"x96" |
| <input type="checkbox"/> 24"x96" | <input type="checkbox"/> 30"x96" | <input type="checkbox"/> 36"x96" | |

Set-up Instructions

Always wear ANSI approved safety goggles when assembling this product. The goggles are not included.

1 **A.** Open case and remove display frame.

B. Then tighten graphic roll and remove graphic. Lay graphic on clean floor or carpet with print side down.

2 While graphic remains print side down, insert Top and Bottom Poles into the top and bottom pole pockets.

3 **A.** Unseal Purple Wrap on frame and assemble poles to locked position.

B. Be sure that Gray End Tips are located at the top of the graphic and Black End Tips located at the bottom of the graphic.

C. The "Y" shaped Tripod should be located at the bottom of the graphic, in between the X-Legs, with each Ring near a Black End Tip.

4 **A.** Starting at the bottom, place foot on bottom edge of graphic to stabilize the graphic position.

B. Guide this assembly parallel to the edge of the graphic and insert into Hub of Bottom Pole. Repeat this step for remaining Black End Tip and Ring.

5 **A.** Now at the top, place foot on top edge of graphic to stabilize the graphic position.

B. Guide Gray End Tip parallel to the edge of the graphic and insert into Hub of Top Pole. Repeat this step for remaining Gray End Tip.

6 **A.** Lift display from behind by using the display frame to hold on to. Correct display angle if needed.

B. Tip: To change the display angle of a section, position a foot on Tripod, a hand on X-Leg and a hand on Black Tie Wrap. For more back angle, push X-Legs down through the Black Tie Wraps. For more forward angle, pull the X-Legs up through the Black Tie Wraps.

Xtra Lite Warranty

Our X, S, T, E, M, P and B lines of frames come with a Lifetime Repair and Replace Warranty. If any of these frames break in the ordinary course of use, we will repair or replace the unit for \$10 per frame, or \$20 for roll-ups, plus return shipping. All other frames and accessories come with a One Year manufacturer's Limited Warranty against defects.